



# TAMAGOTCHI™ INSTRUCTIONS

**Congratulations!**  
You are now the caretaker  
for a genuine Tamagotchi.  
Tamagotchi is a cyber  
creature who has traveled  
millions of miles from its  
home planet to learn what  
life is like on earth. Let me  
explain how to care for  
your Tamagotchi.





object. **NOTE:** Remember not to press the reset switch too hard when using a sharp rod, pencils, sharp pens, etc.

3) Adjust the time difference between Tamagotchi's planet and earth (Timer set). First press the middle button (B) to bring up the timer screen. Use the left button (A) to set the

hours and the B button to set the minutes. Once you have set the correct time, press the right button (C) to set the

timer. Next, return to the main screen by pressing the B button again.

When you have completed these three steps, a pulsating egg will appear. Tamagotchi will hatch in about 5 minutes.

**NOTE:** During this time only the timer and reset functions are available.

As soon as Tamagotchi hatches, it will beep at you for attention. This is where the health meter comes in handy. You can determine the mood, health and behavior of Tamagotchi with the





**FEED:** Press A button until knife and fork icon is highlighted, then press B. Select either Meal or Snack by pressing the A button to move the arrow, then press the B button to feed Tamagotchi. Be careful not to overfeed Tamagotchi; if you do it will refuse to eat.



**LIGHT:** Press A button until the light bulb icon is highlighted, then press B button. Select either On or Off by pressing the A button to move the arrow, then press the B button. The light should be turned off when Tamagotchi is sleeping, or it might get restless! Tamagotchi will automatically turn the light on when it wakes up.



**DUCK:** Just like real pets, Tamagotchi goes to the bathroom. If droppings appear on the screen, it must be cleaned up right away or Tamagotchi will get sick. Press the A button until the Duck icon is highlighted, then press the B button to flush the screen. Tamagotchi will be very happy after the mess is cleaned up.



**HEALTH METER:** Check Tamagotchi's health, by pressing the A button until the Health Meter icon is highlighted, then press B button to check Tamagotchi's age/weight, discipline, hunger and happiness. After you have checked all the screens to see if Tamagotchi needs anything, press C to return to the main screen. You should also check this screen if Tamagotchi beeps at you and the "attention" icon is highlighted.



Discipline meter

More black hearts means full or happy!

**PLAY:** Press A button until the bat and ball icon is highlighted, then press B button to begin the game. The object is to guess which way Tamagotchi will turn. To choose left, press the A button, to choose right, press the B button. If you choose the correct direction, Tamagotchi will be happy. There are 5 chances in each game to match Tamagotchi; the more you match, the happier Tamagotchi will be. To stop the game press the C button. After playing, check the happiness meter to see if it went up or down.




**MEDICINE:** If a "skull" image appears, Tamagotchi is sick and needs medicine. Press A button until the medicine icon is highlighted, then press B. Sometimes 2 or 3 injections are needed before Tamagotchi is well.



**ATTENTION:** When this icon is highlighted, Tamagotchi needs something. Check the Health Meter, to determine what Tamagotchi needs. If Tamagotchi doesn't need anything, it must be disciplined or the Attention icon will stay highlighted.

**DISCIPLINE:** Tamagotchi needs discipline if it:

- 1) beeps even though it is full and happy
- 2) won't eat when it is hungry
- 3) won't play games when it is not very happy. If you neglect to discipline Tamagotchi when needed, it might grow up into an unattractive, bad mannered alien.

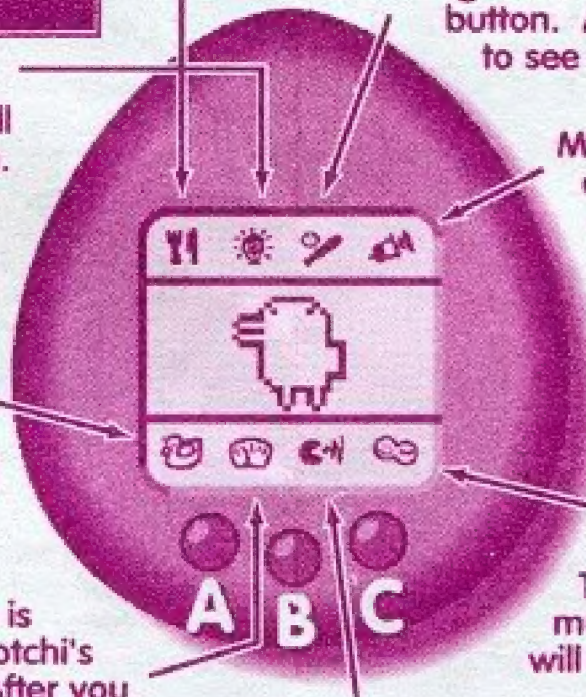



health meter. Tamagotchi will need to be fed and played with soon after it hatches. In order to start Tamagotchi on a good growth path, you must take good care of Tamagotchi right from the start.

### **HAPPINESS AND HUNGER STATUS CHECK**



There are a total of 4 hearts on the "Happy" and "Hunger" screens and they start out empty. The more hearts that are filled, the better satisfied



Tamagotchi is. You must feed or play with Tamagotchi in order to fill the empty hearts. If you keep Tamagotchi full and happy, it will grow into a cute, happy cyber creature. If you neglect Tamagotchi, it will grow into an unattractive alien.

### **DISCIPLINE STATUS CHECK**

As the meter moves towards the right, it indicates you are raising a well-behaved Tamagotchi. The higher the discipline scale





the less trouble and better behaved Tamagotchi will be. The key to increasing the discipline meter is

to make sure you scold Tamagotchi when necessary. If Tamagotchi beeps at you for no reason, you must discipline it.

Tamagotchi needs discipline if it:


- \* beeps at you even though it is full and happy
- \* won't eat when it is hungry
- \* won't play games when it is not very happy

## AGE AND WEIGHT CHECK

Converts and displays Tamagotchi's growth information in earth units.



## GROWTH CHART

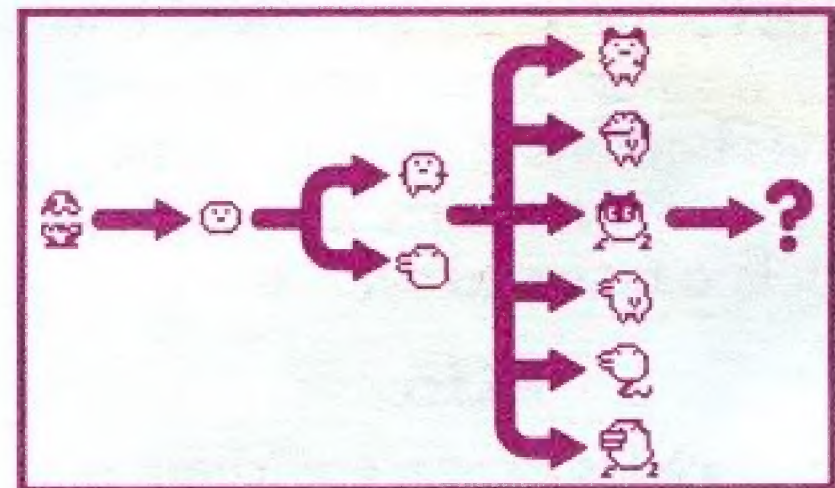

Which one will you get...maybe the hidden character?



## BIOLOGY

- One earth day is equal to about one year for Tamagotchi.
- Tamagotchi will change appearance several times before it reaches its adult form.
- It seems that the shape, personality and life of each Tamagotchi is based on how well you take care of it. Each time you hatch a new Tamagotchi it could grow up to be any one of several adult forms.

Tamagotchi will always return to its home planet. How well you care for it helps determine how long Tamagotchi will stay on Earth. When it is time for

Tamagotchi to return to its home planet,

there is nothing you can do. But, don't worry, you can always hatch another egg.





## WILL YOU BE A GOOD CARETAKER FOR TAMAGOTCHI?

**0 - 5 YEARS:** Try harder next time

**6 - 10 YEARS:**

Room for improvement

**11 - 16 YEARS:** Good  
job

**17 - 22 YEARS:**  
Excellent

**23 + YEARS:**  
Amazing!

In order to hatch  
another Tamagotchi, press the A  
and C buttons simultaneously  
and a new pulsating egg will



appear. In about 5 minutes a  
new Tamagotchi will be born.  
Maybe you will raise a different  
version of Tamagotchi this time.  
Try it and see.

## TIMER FUNCTION

When you want to  
know the time, press  
the B button when no  
icons are highlighted  
and the time will  
appear on the screen.  
To return to the main  
menu screen, press the  
B button again.

In order to re-set the time, press  
the B button to bring up the





timer. Press the A and C buttons simultaneously and the word "SET" will appear on the screen. Then follow the same instructions used to set the timer. Press C button again to return to regular time. Press B again to return to the main screen.

**NOTE:** Timer cannot be adjusted if Tamagotchi is preparing to return to its home planet.

### **WHEN TO RESET**

- \* When you want to let Tamagotchi return home
- \* When you have changed batteries

- \* If Tamagotchi is not functioning properly
  - \* When you want to begin raising a new Tamagotchi
- NOTE:** Remember, do not press the reset button too hard when using a pointed object.

### **SOUND**

After Tamagotchi has hatched, the sound can be turned off by pressing the A and C buttons simultaneously. To restore the sound, press A and C again.

### **BATTERIES**

Replace the batteries if the Liquid Crystal Display (LCD) is weak.



- 1) Loosen the screws on the back side. Remove the cover together with the screws.**
- 2) Take out the old batteries. Insert 2 new LR44 batteries, making sure to match "+" and "-" signs properly. Be sure to use both new batteries, do not mix old and new batteries. Do not mix ALKALINE, STANDARD or RECHARGEABLE BATTERIES. Dispose of used batteries properly.**
- 3) Replace the cover and tighten the screws.**
- 4) Reset the timer and a new Tamagotchi will hatch in 5 minutes.**

**CAUTION:** Battery may be harmful if swallowed.

© Bandai 1996-1997. Printed in China.